

RS3200 Function Summary

<Glossary>

| | |
|---------------|---|
| RS3200 | Keyless Entry/Security System |
| Arming | Enables the system to detect theft |
| Disarm | Enables the system to deactivate the arming/alarm modes |
| Panic mode | System mode which allows one to activate the alarm using the remote |
| Trunk release | Opens the trunk using the transmitter |

<Description>

1. Remote Arming/Door Lock Function
Pressing the "LOCK" button of transmitter locks the doors and arms the RS3200 system.
2. Remote Disarming/Door Unlock Function
Pressing the "UNLOCK" button of transmitter unlocks the doors and disarms the RS3200 system.
3. Panic Function
Pressing the red "PANIC" button of transmitter, activates the RS3200 panic function. During panic mode, the doors lock, the exterior/interior lights(head lights/dome lamp) flash, and the horn sounds for 60 seconds. Pressing any button (LOCK/UNLOCK/PANIC/AUX*) or inserting the key into the ignition switch and turning it to the "ON" position, deactivates the panic mode.
(*The AUX button can be used on transmitters with four buttons.)
4. Trunk Release Function
Pressing "AUX" button of transmitter activates the trunk release function. This function can be used on transmitters with four buttons.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this device that are not approved by the manufacturer may void the user's authority to operate this device.